

## Installation Guidelines

## Accessories

### Topguard

Data Sheet: (sheet 1 of 2) 10/09/2014 DT

These instructions apply to; Topguard, Topguard Plain, Topguard FR and Tyreguard mats



Open the packaging carefully and locate the "Matting order confirmation form" (yellow envelope). Check the contents are complete as per the delivery note.

Each mat panel is labelled, as shown in "Matting order confirmation form". Locate the "T" shaped divider bars.


Before commencing the mat installation, the matwell preparation should be completed, with the subfloor flat, dry and free from contaminants and the perimeter frame level, suitable to install the gauge of entrance mat supplied.

Irregularities in the matwell substrate should be made good prior to the mat installation to avoid premature wear or damage to the mat during use.

Check any door opening clearance is suitable to accept the entrance mat.

GRADUS		MATTING ORDER CONFIRMATION FORM																					
Customer Name	Order Reference	Order Date	Order Status																				
Customer Order No.	Order Description	Order Location	Order Contact																				
<table border="1"> <tr> <th>Order Ref</th> <th>Order Description</th> <th>Order Location</th> <th>Order Contact</th> </tr> <tr> <td>L4</td> <td>RA</td> <td></td> <td></td> </tr> <tr> <td>L3</td> <td>RD</td> <td></td> <td></td> </tr> <tr> <td>L2</td> <td>RD</td> <td></td> <td></td> </tr> <tr> <td>L1</td> <td>RD</td> <td></td> <td></td> </tr> </table>		Order Ref	Order Description	Order Location	Order Contact	L4	RA			L3	RD			L2	RD			L1	RD			<p>Notes:</p> <p>1. The matting order confirmation form must be completed and signed by the customer.</p> <p>2. The matting order confirmation form must be completed and signed by the customer.</p>	
Order Ref	Order Description	Order Location	Order Contact																				
L4	RA																						
L3	RD																						
L2	RD																						
L1	RD																						

Check that each panel is clearly marked and matches the details shown on the "Matting order confirmation form" before any installation commences. Where possible, prior to installation, lay the matting panels out in an adjacent clean, dry area to check the panels fit together correctly and match the plan supplied.

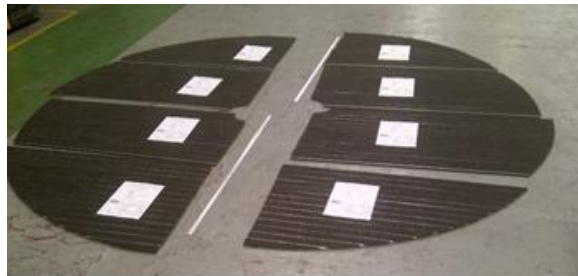

Mats produced to a drawing or templates are supplied to a finished size, as requested, and indicated on the "Matting order confirmation form" and should require minimal site adjustment. The mats should be laid so that pedestrians walk across the mat ribs, the direction of traffic (DOT) and not along them.

Mats exceeding 2m wide may be supplied with divider bars. When provided for installation they must be placed between panel sections and along the direction of travel (DOT) prior to fitting of the matting panels.

Highlighted on the "Matting order confirmation form" are the locations to fit divider bars. Divider bars should be installed to provide a 1mm clearance to ensure the matting panels can be cleanly dropped into position.

The divider bars are fitted into the prepared matwell base using either double sided tape or gunned adhesive. Ensure the top edge of the divider bars are flush with the top of the matwell frame.


## Installation Guidelines

## Accessories

### Topguard

Data Sheet: (sheet 2 of 2) 10/09/2014 DT

*Topguard 12mm Open Construction, Recessed in a Matwell  
Double Grey Nylon Wipers with Aluminium Scraper Linking Strips*

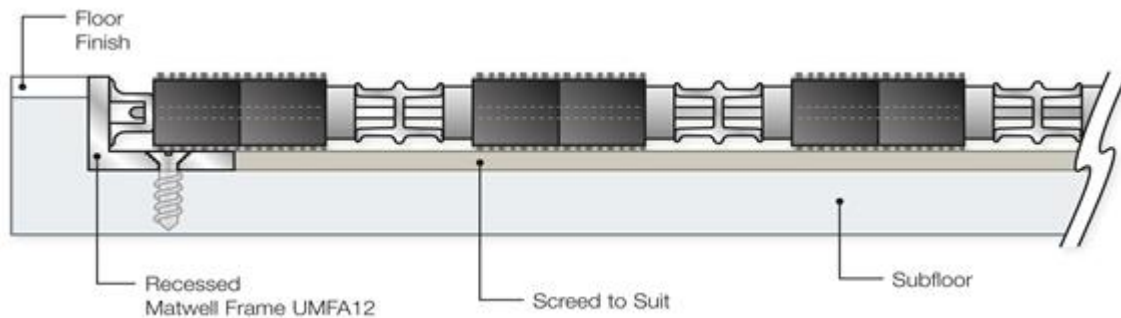

Check the front to back clearance in the direction of traffic (DOT). Topguard and Tyreguard mats are normally supplied in finished panel sizes which should ensure they can be installed without any need for on-site alterations. Where any fitting adjustments are considered necessary, this should then be carried out by a competent fitter as the affected module(s) will require re-tensioning and the stabiliser wires recut and closed off.

Commence the installation with an unshaped mat panel wherever possible, being sure to follow the location indicated in the "Matting order confirmation form". Further panels should then be fitted, ensuring all panels are tight to the divider bars and with no gaps, except for a 1mm tolerance.

Leave the labels on each mat panel until installation is completed.

When fitted correctly, adjacent panels either side of the divider bars should then align.